
CVCRYSIGHT



Maverick comes in two sizes – Medium & Large



Know your Maverick

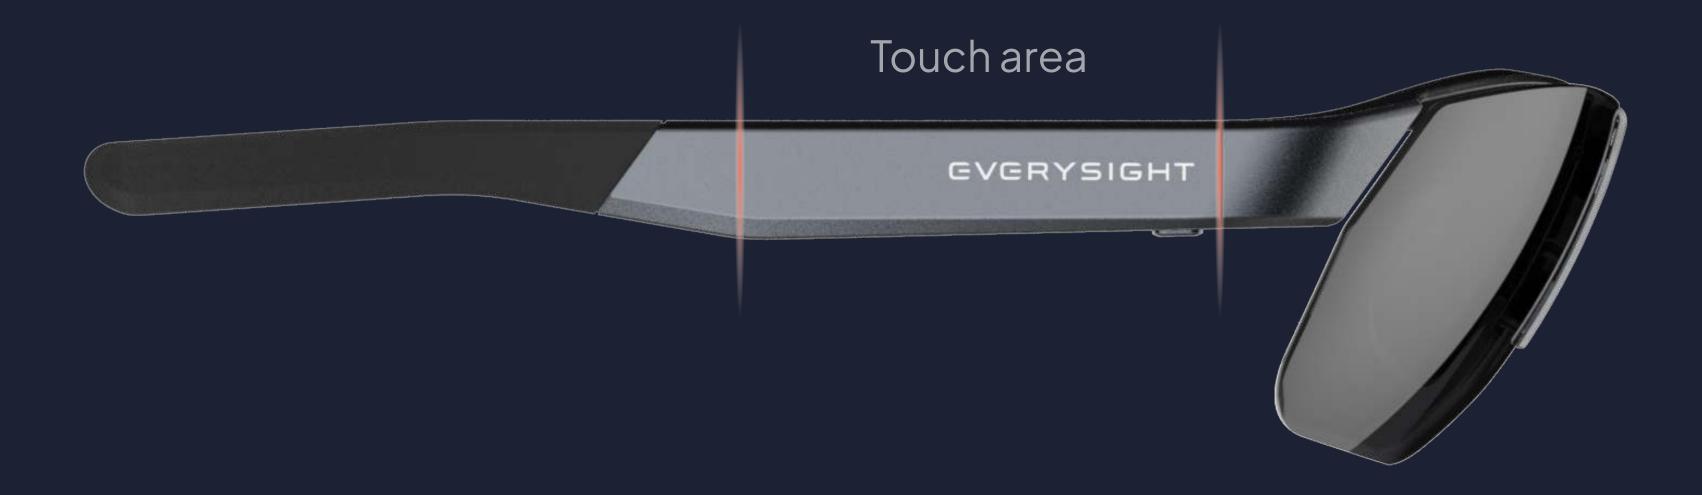


Touch Geasures


Tap | Long Tap Swipe Forward | Swipe Backwards


Know your Maverick



Know your Maverick

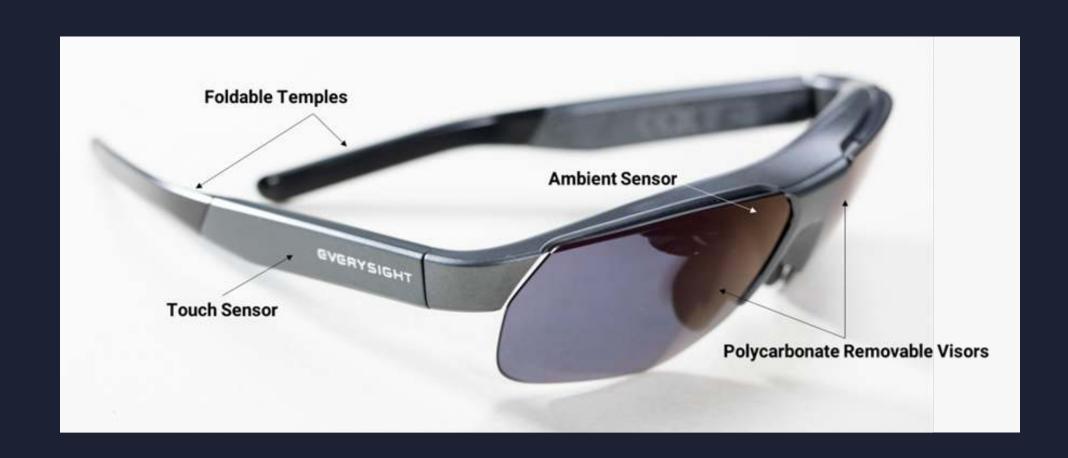

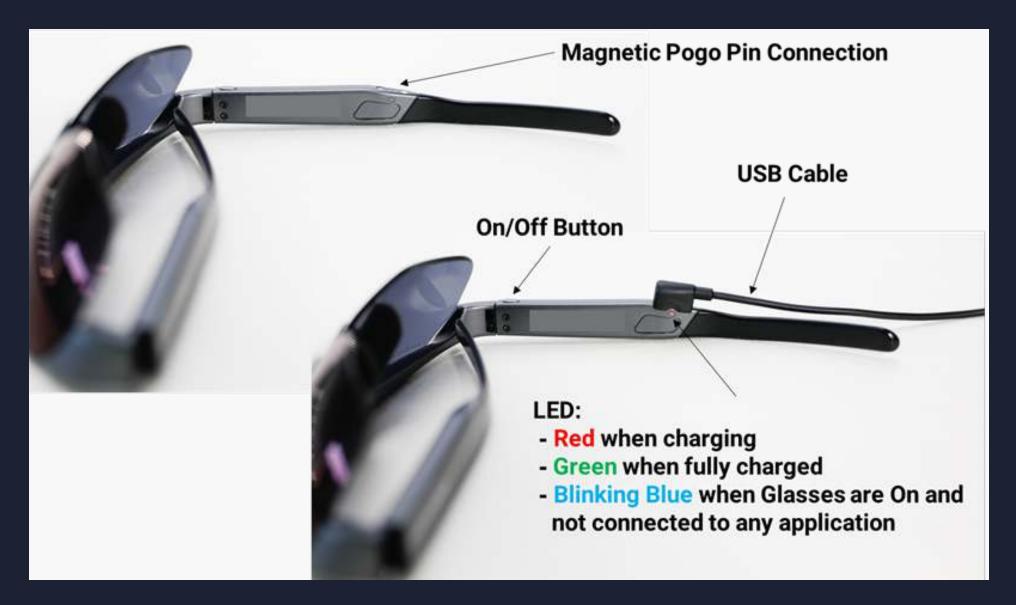

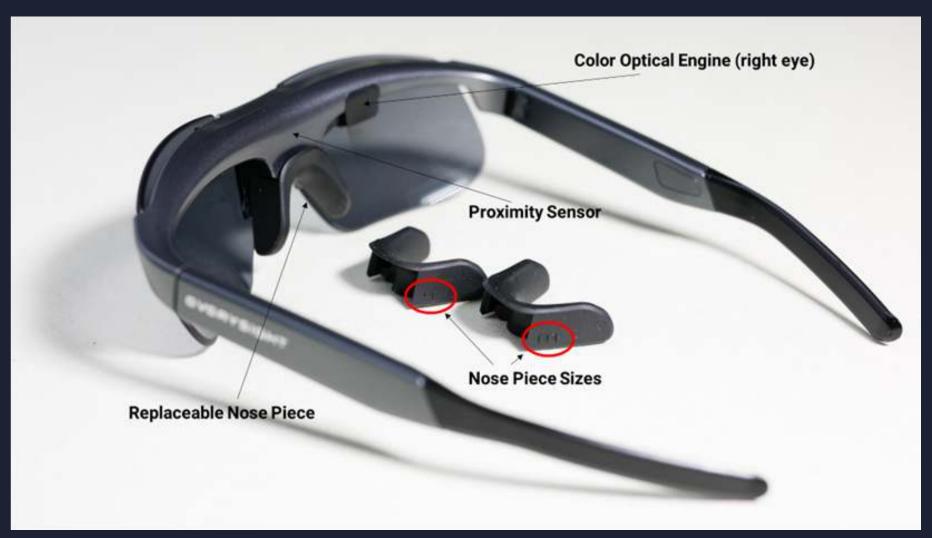






Using the app


Connecting Maverick

1. Turn On Glasses (press for over 1 sec till Blue led starts to blink)

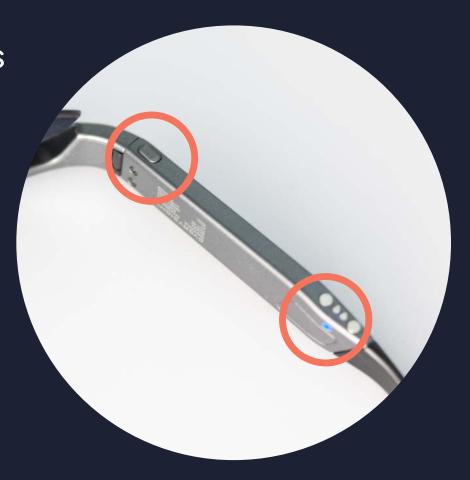


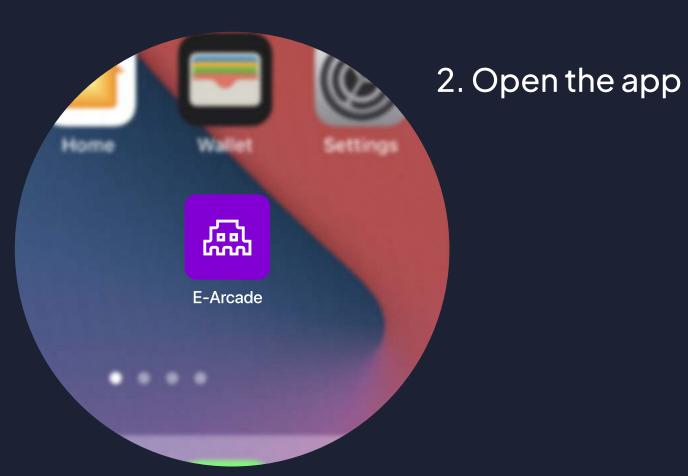


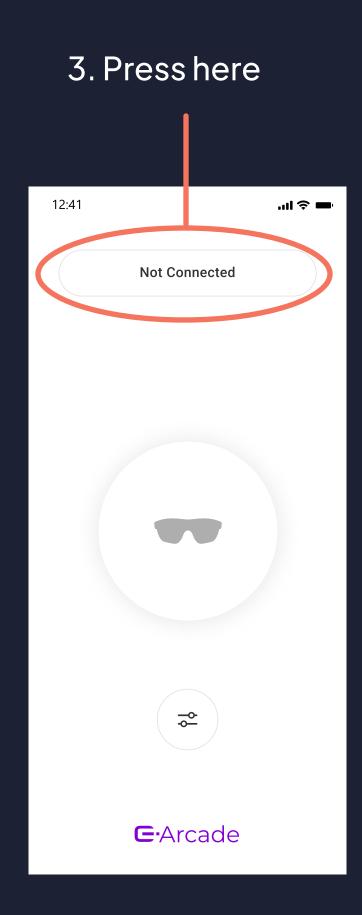

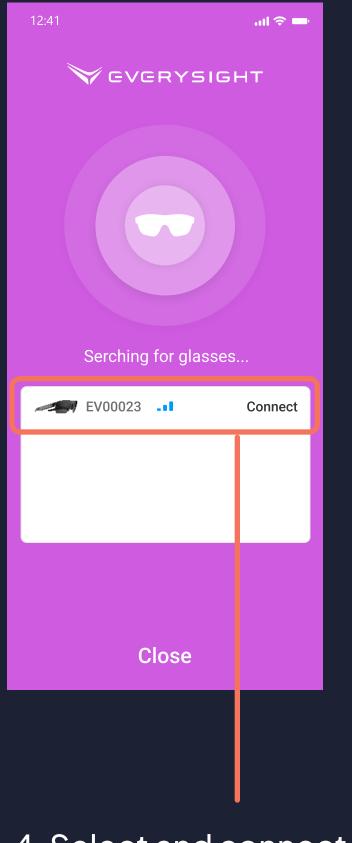




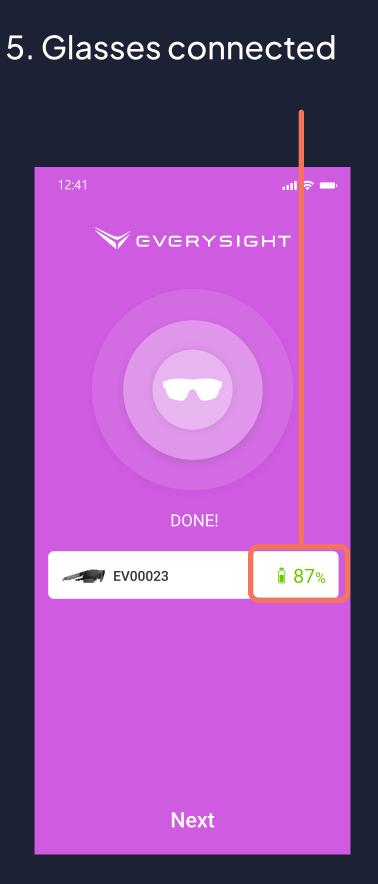


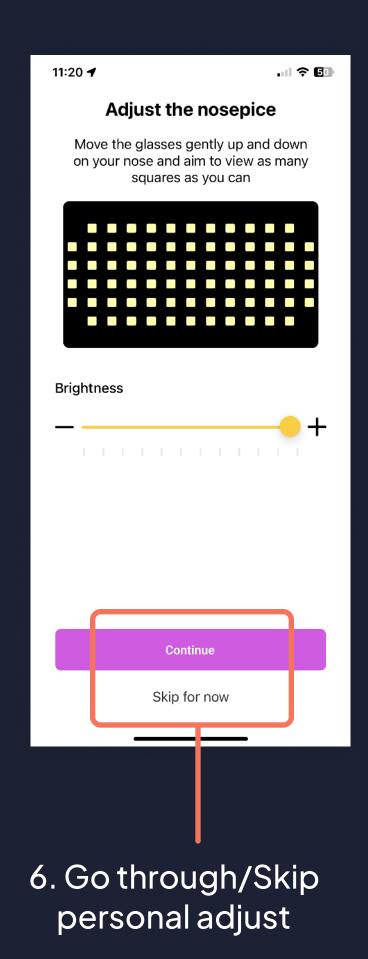


Using the app

Home screen

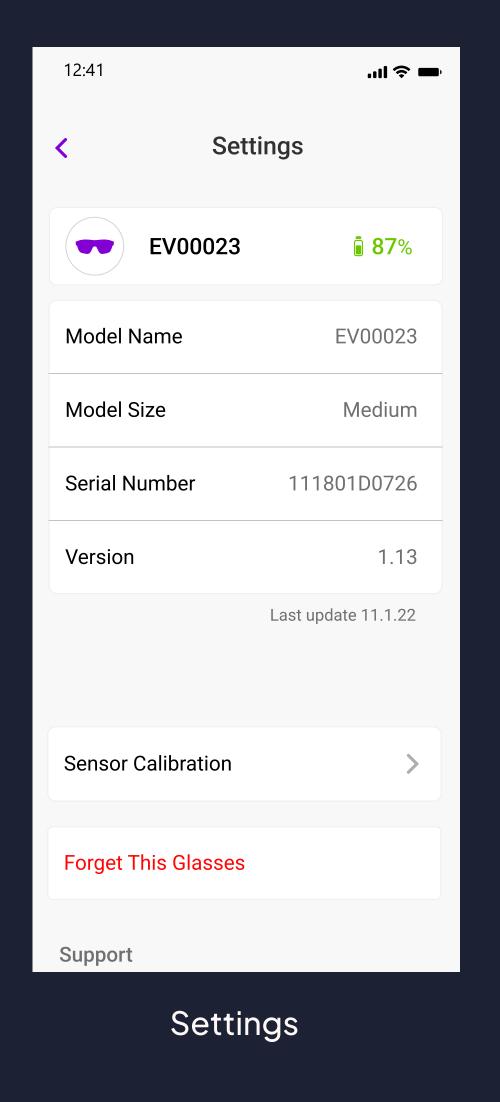

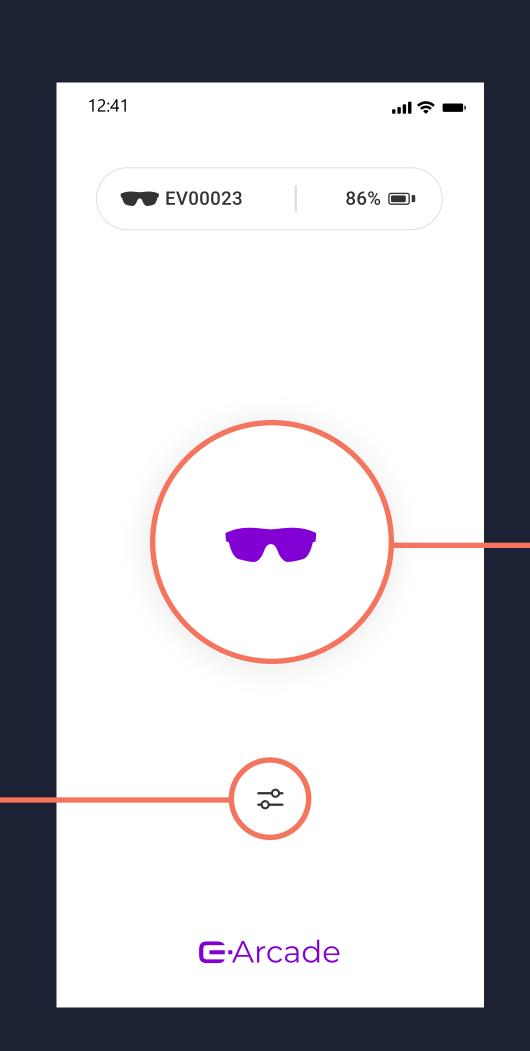

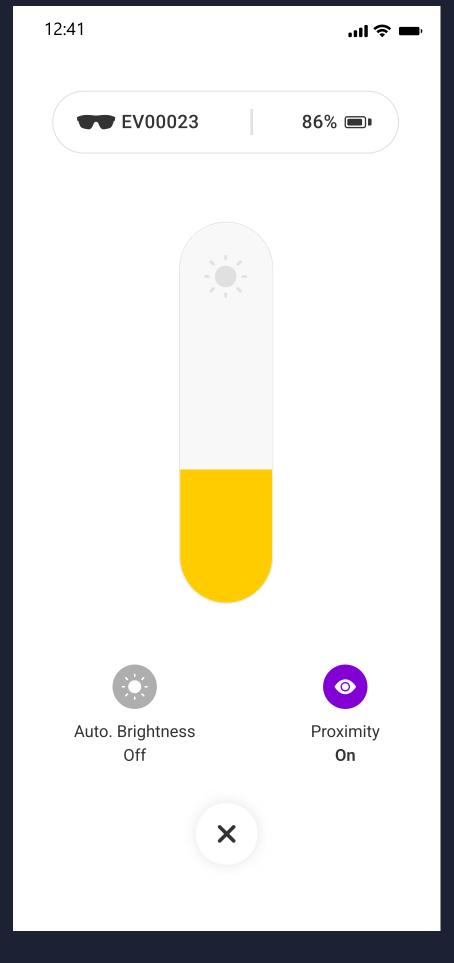


Glasses adjust

Using the app

Games Type


HUD Control

(Tic tac toe, Ninja)

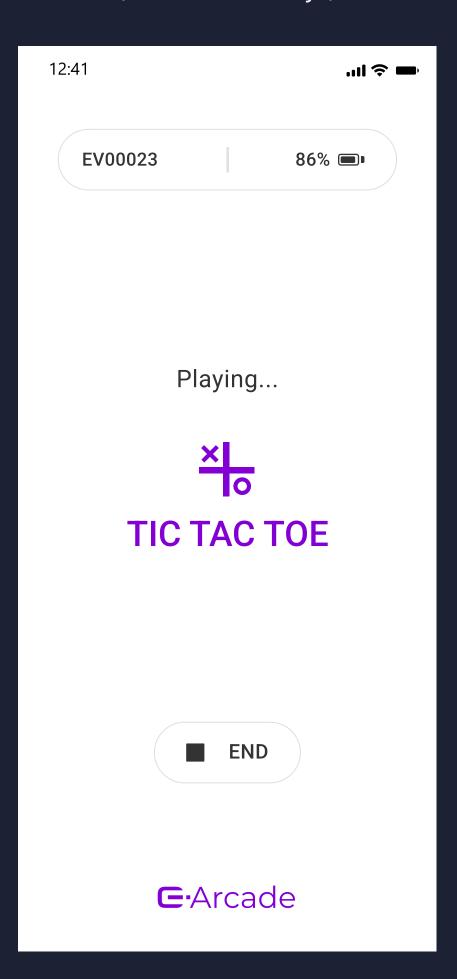


App Controller

(Snake, Invaders)

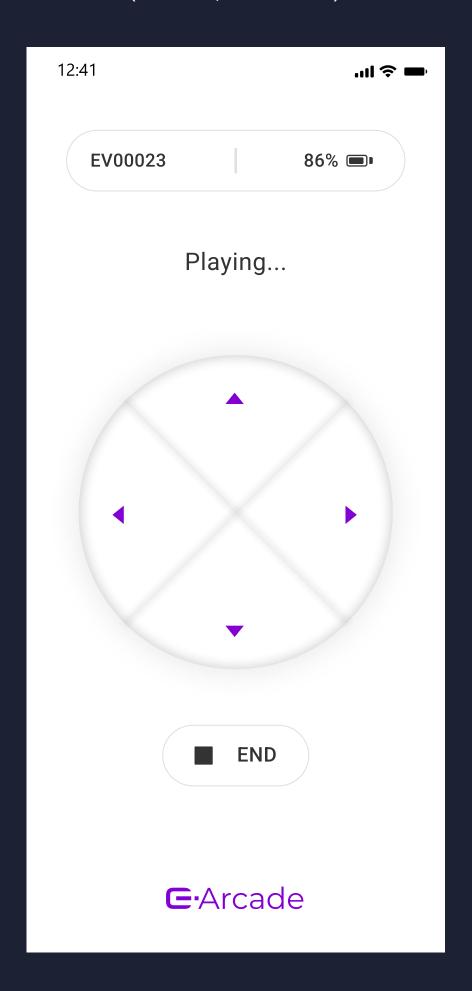

Tap control

(Sky Flutter)

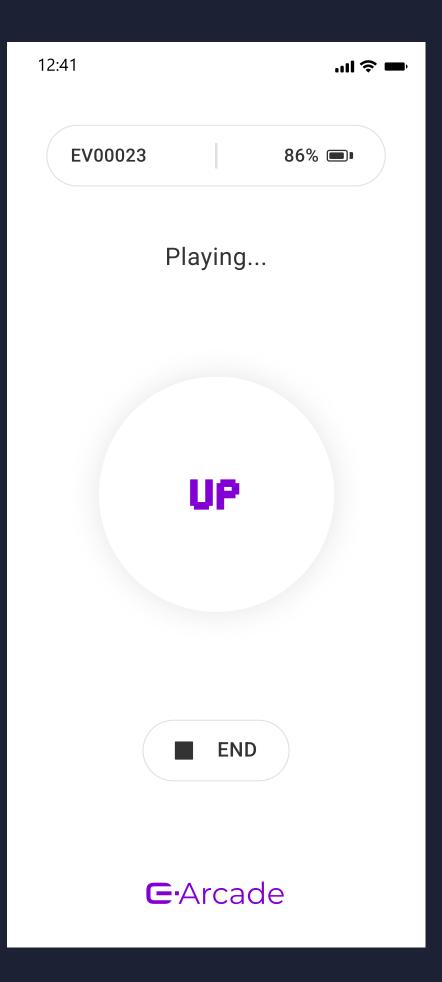


HUD Display


Basic Use


Hover for 1 second Mute/unmute sound

Home screen Yellow dot is your courser

Hover for 1 second Operational tip

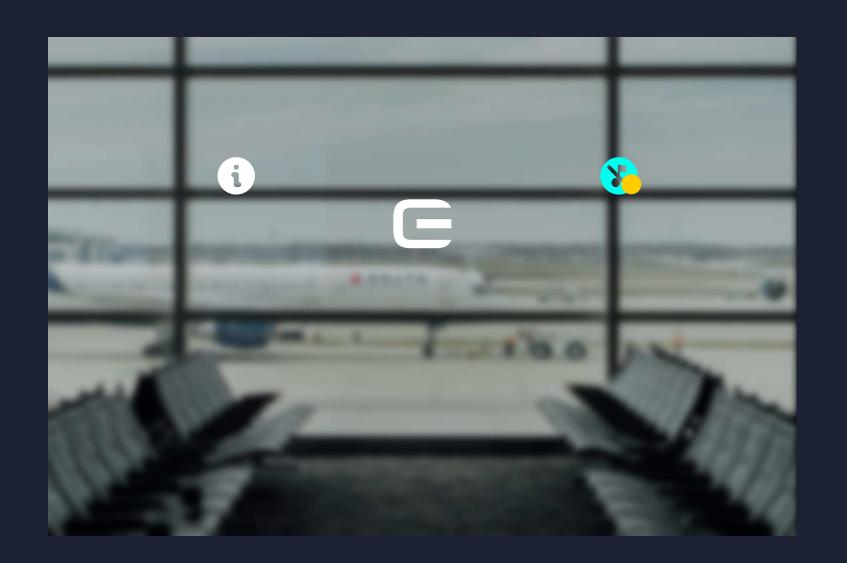

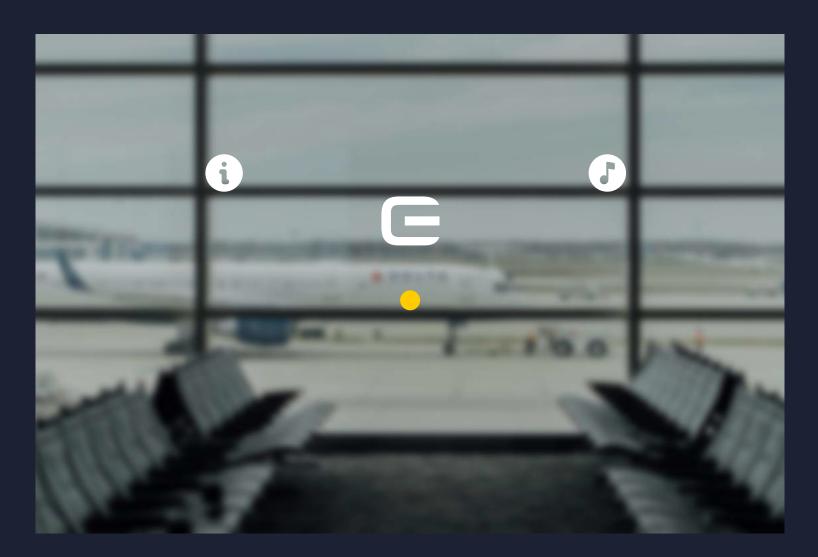

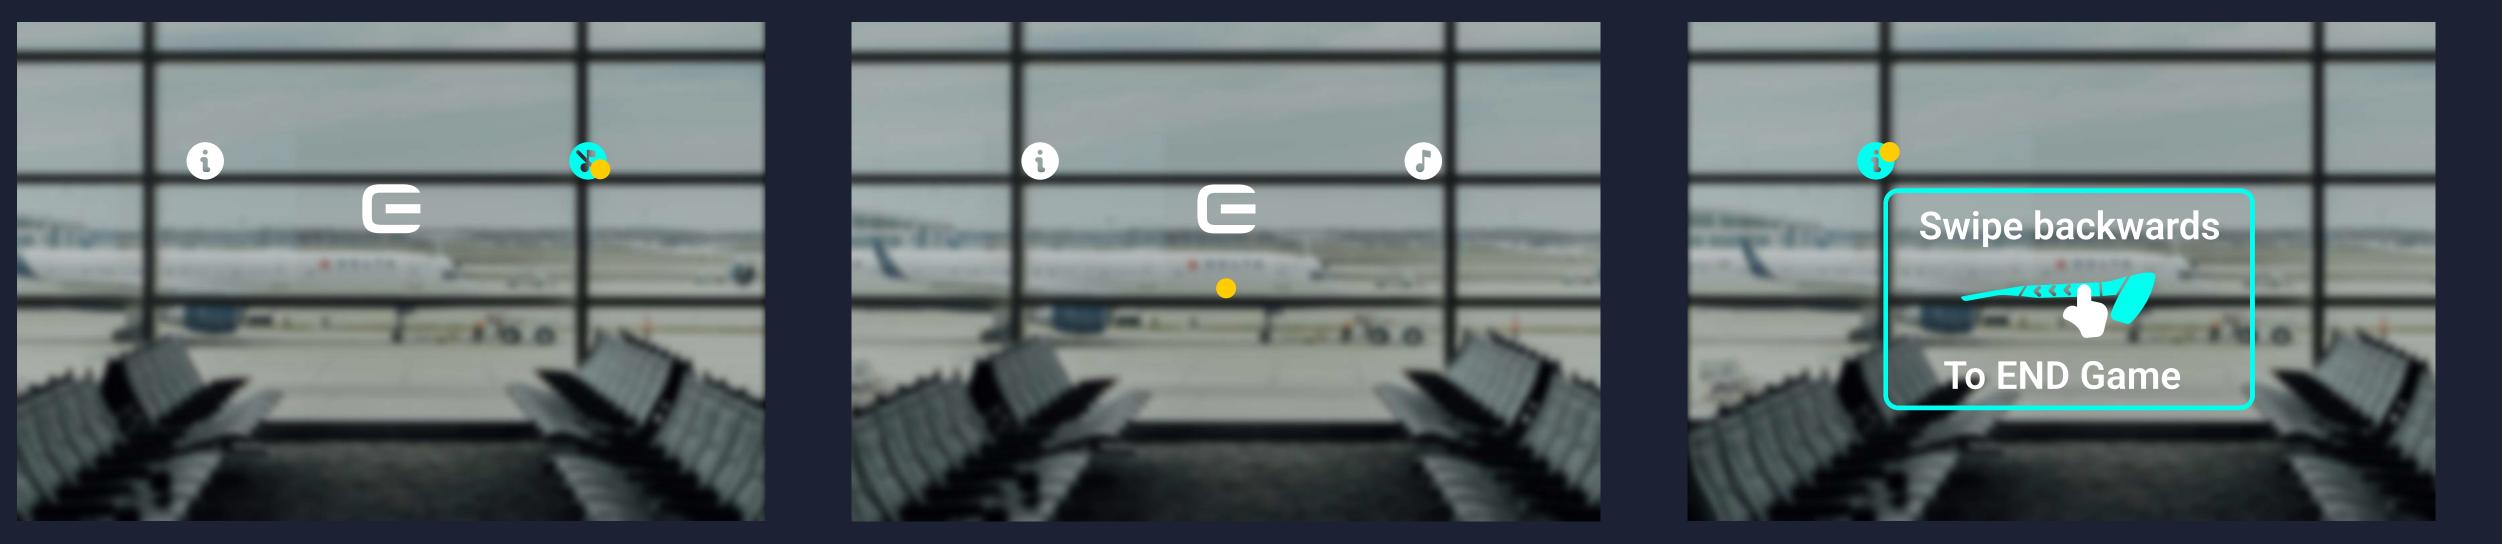


HUD Display


Basic Use

Hover for 1 second Games menu

Hover Choosing game

Loading Game Swipe backwards to end

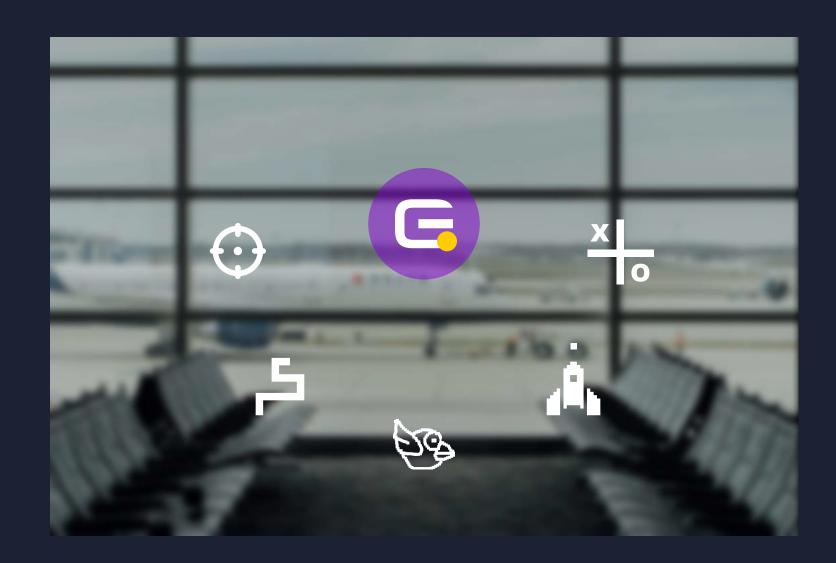

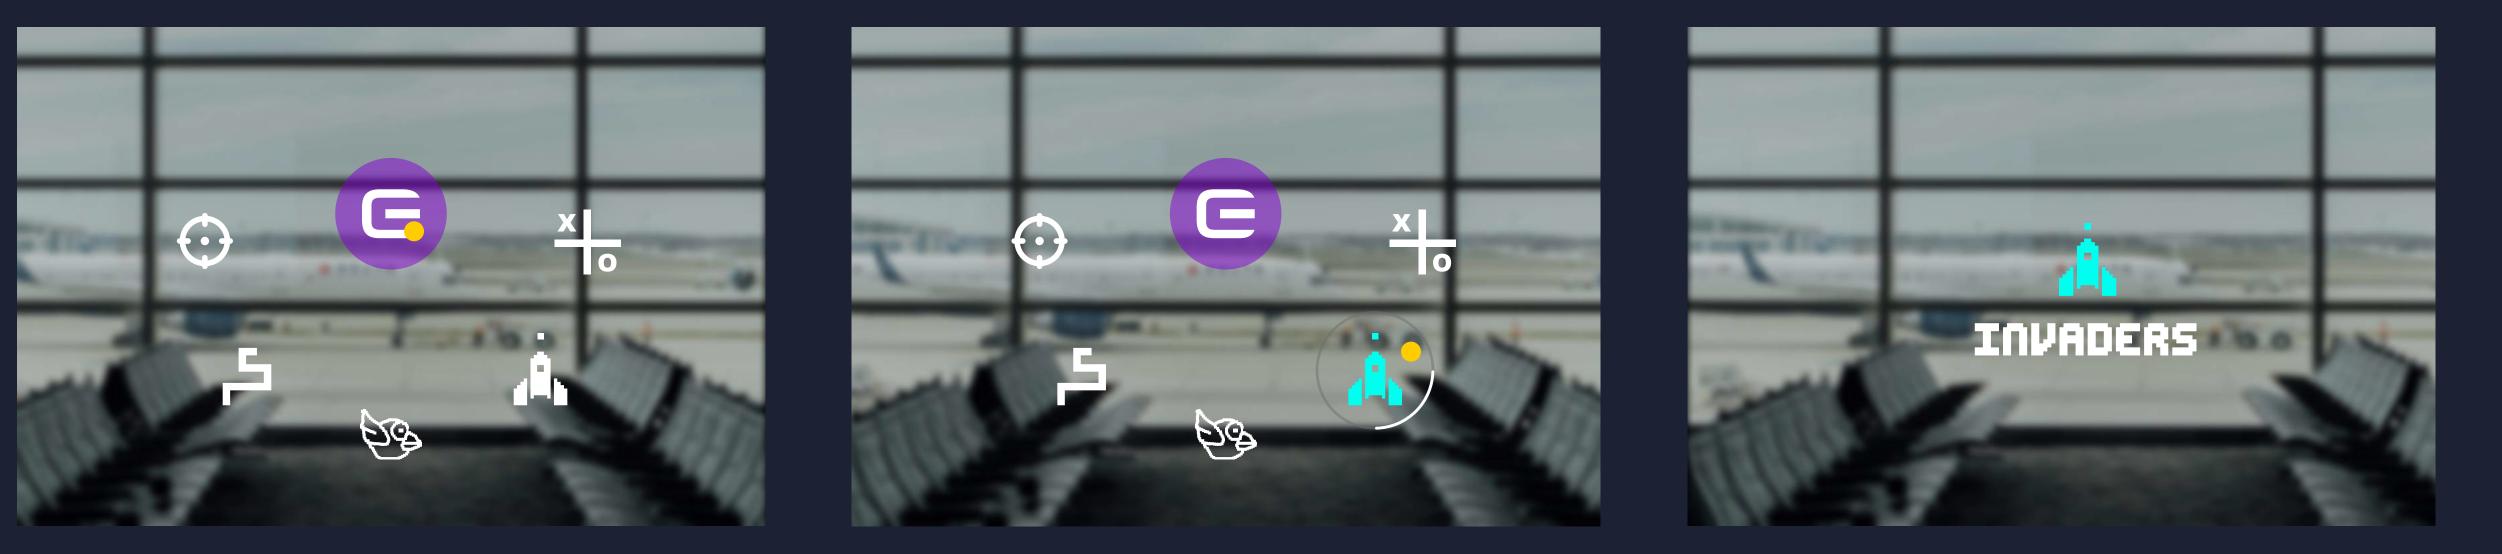





Touch Gestures

Centermenu

Tap

Centers the menu position

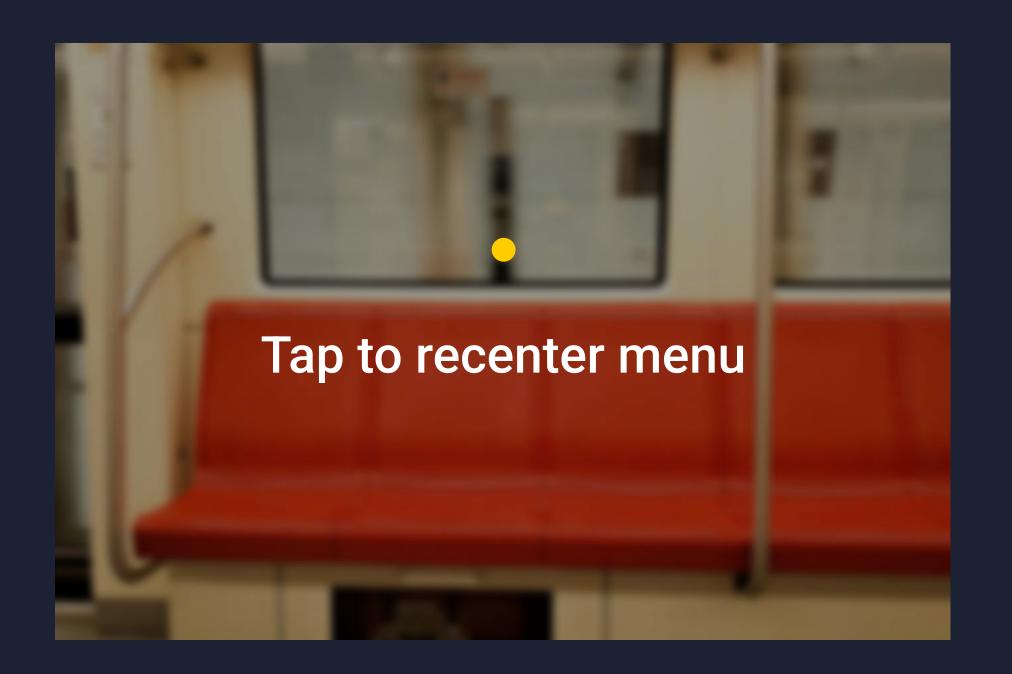

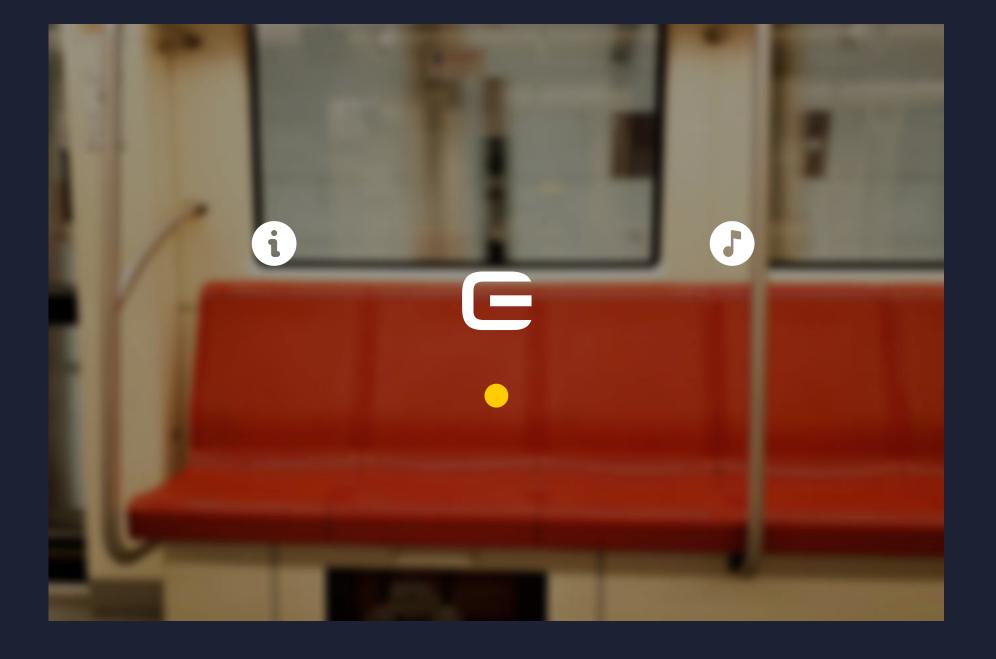



Touch Gestures

Centermenu

Swipe Backwards

Ends any game

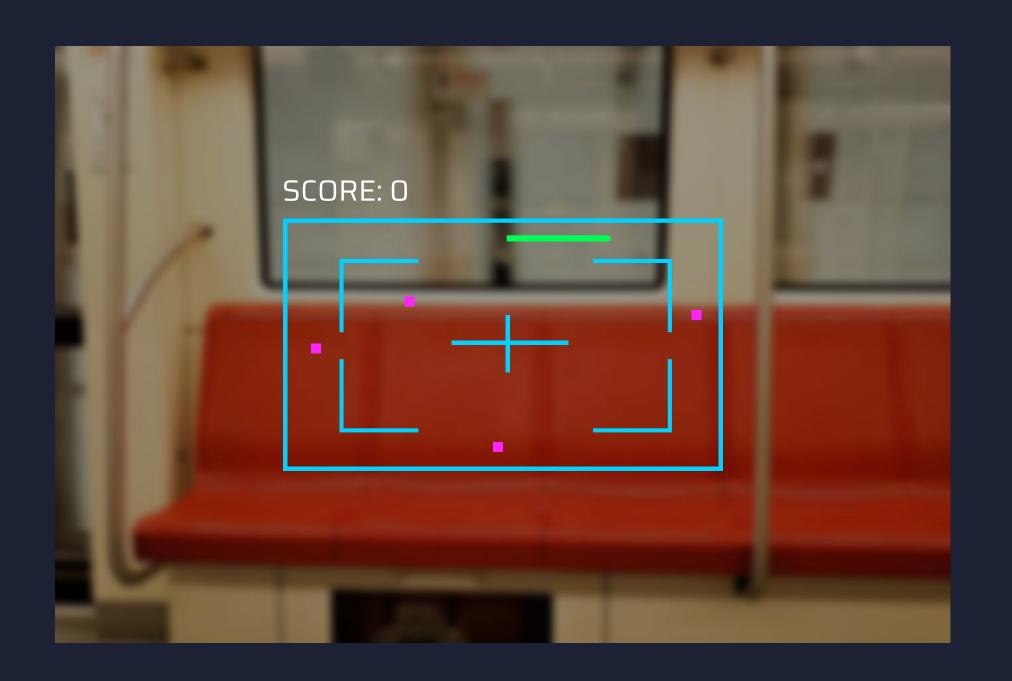

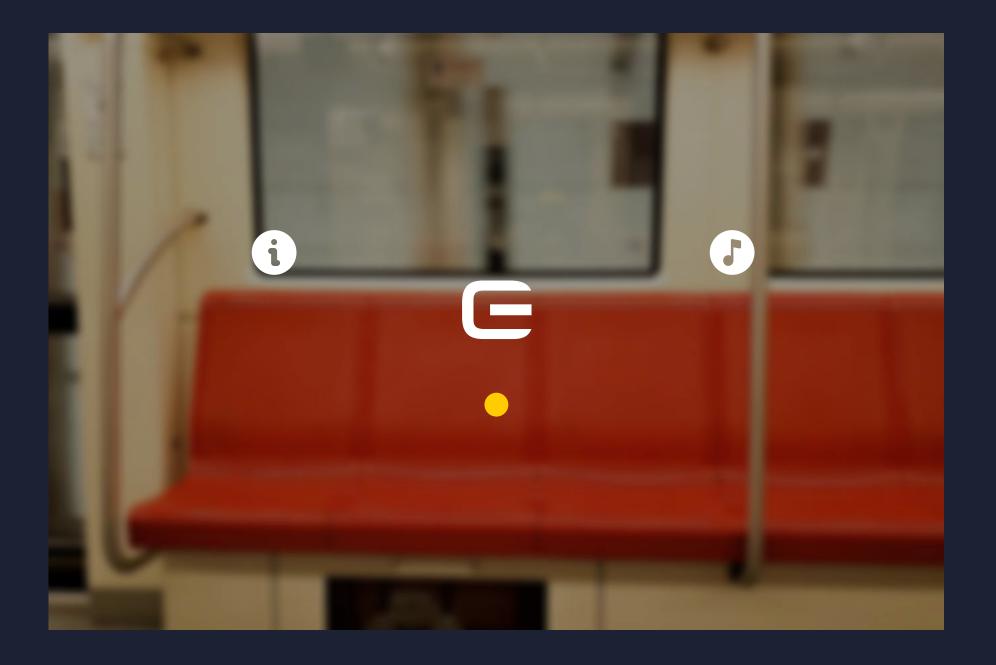





HUD Notification

Need To Calibrate

First Use

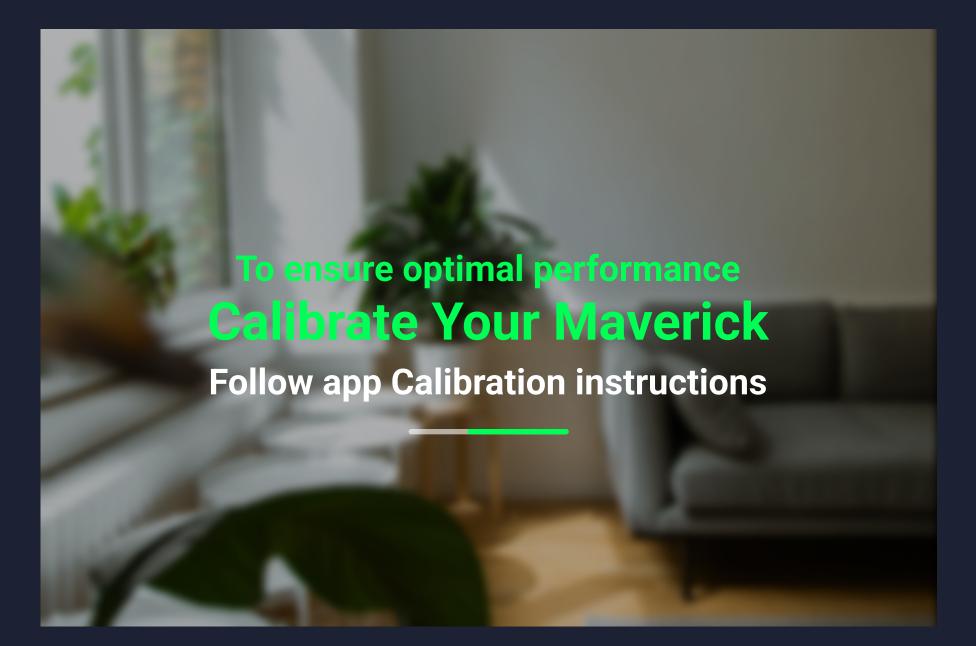

Recommendation

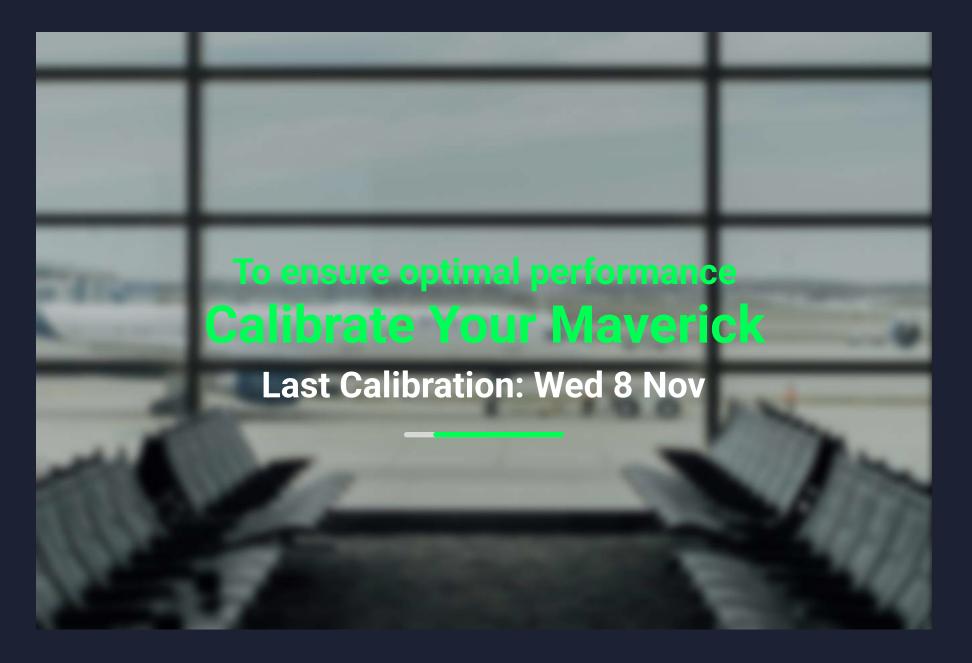

Before you start


Make Sure

Turn On Glasses

Press for over 1 sec till Blue led starts to blink





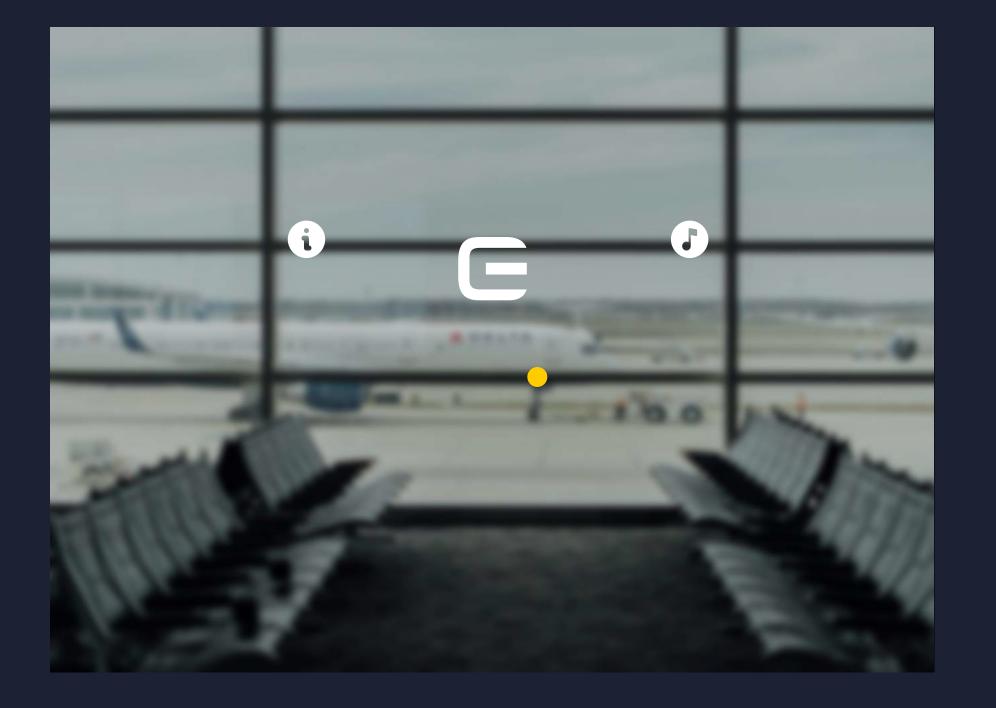

Before you start

Hold Position





Hold position should be after the hinge


Calibrate Maverick


 \rightarrow


Calibration Process

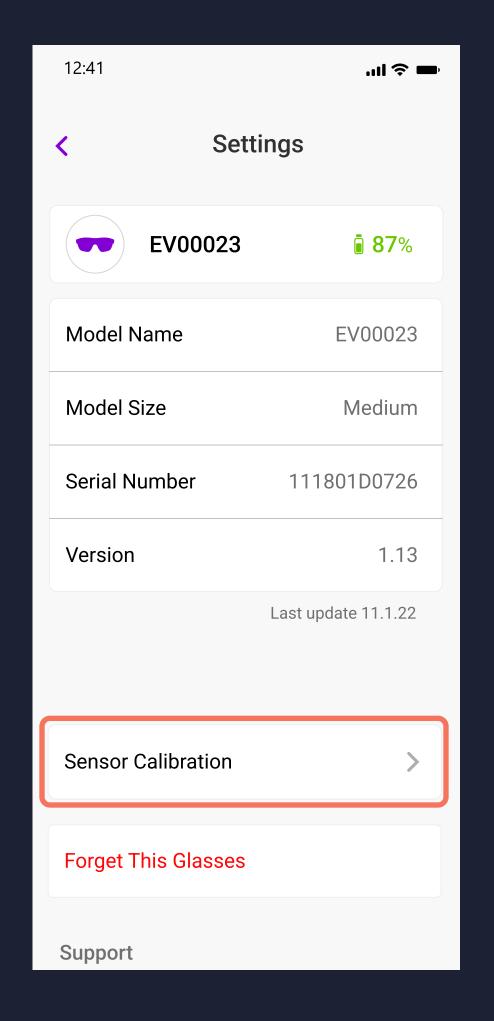

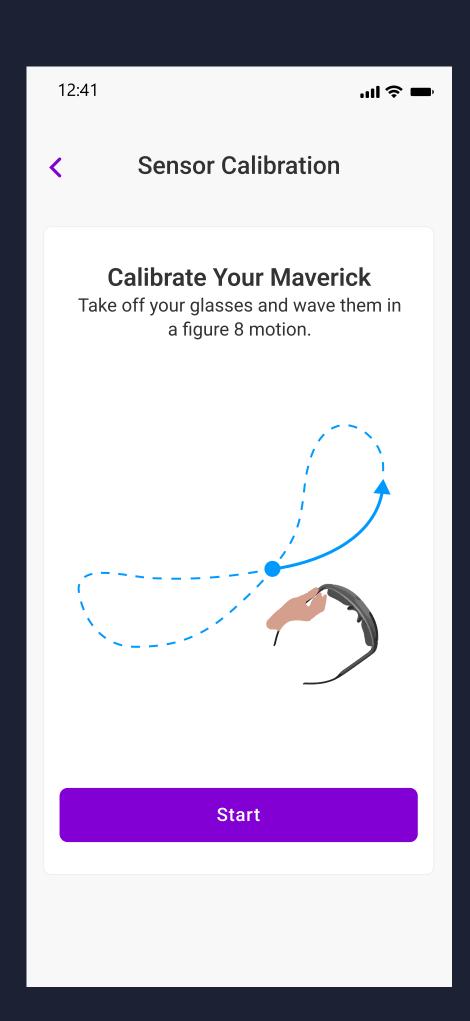

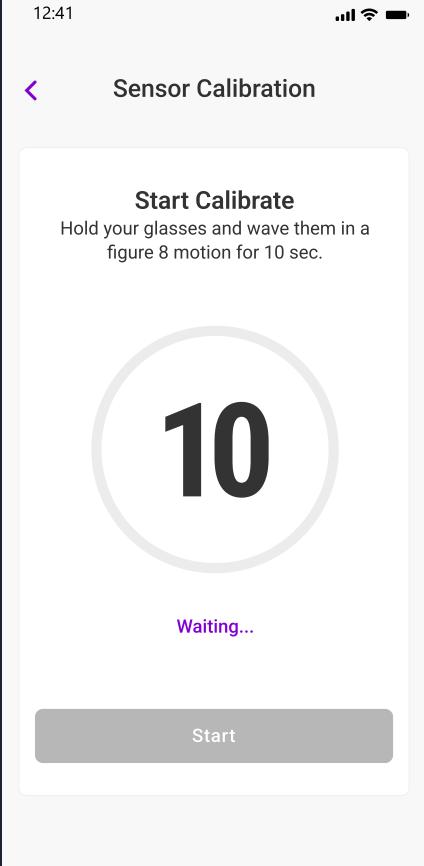

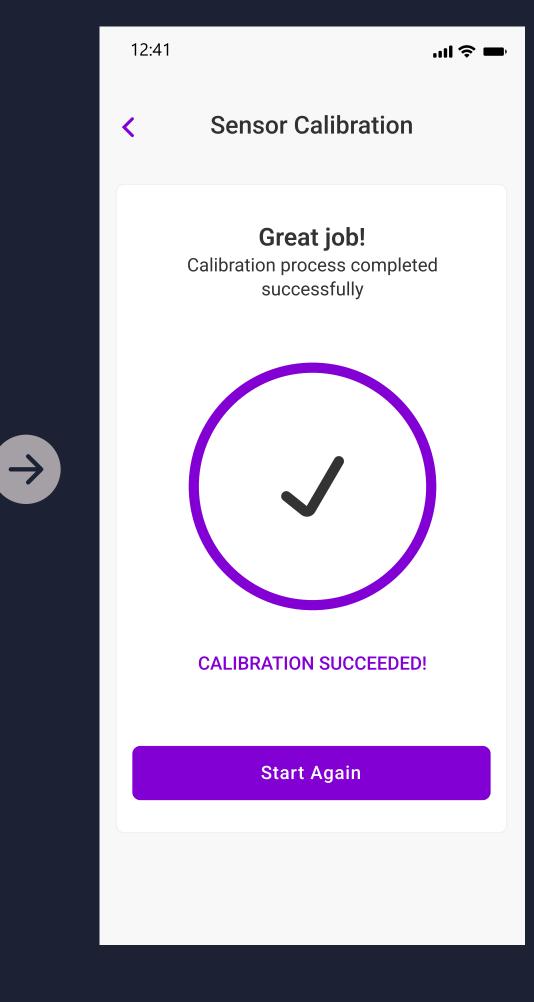


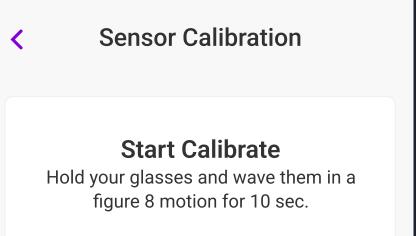



Calibrate Maverick

Figure 8

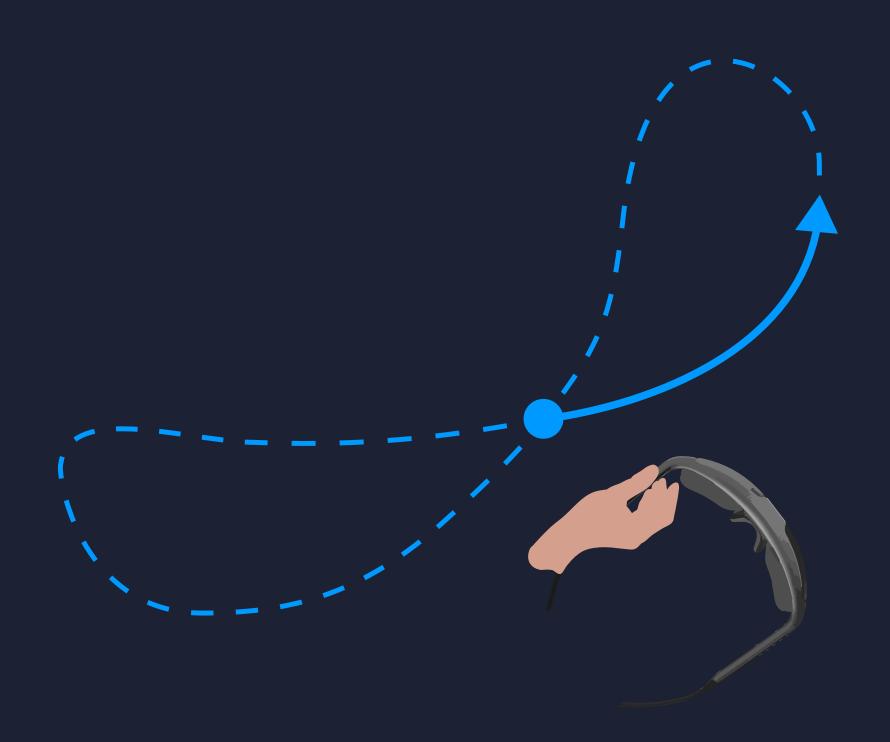

Take off your glasses and wave them in a figure 8 motion

ENJOYMAVERICK



The information, data, drawings and the like contained in this document are proprietary to Everysight and strictly secret and confidential, and are supplied with the understanding that they will be held secret and confidential. The disclosure by Everysight of information contained herein does not constitute any license or authorization to use or disclose information, ideas or concepts presented. No part of this document may be disclosed to any third party, copied, reproduced or stored on any type of media or used in any way by any party without the specific prior written authorization from Everysight, or their direct representatives. This document has been prepared on the basis of reasonable opinions and assumptions.